

REMOVING THE CLUTCH

- 1. Remove:
- clutch housing assembly
- gasket
- dowel pins

NOTE: _

Working in crisscross pattern, loosen each bolt 1/4 of a turn. Remove them after all of them are loosened.


- 2. Straighten:
- punched portion of the nut ①
- 3. Remove:
- nut (1)

NOTE: _

Use a universal clutch holder ② to hold the clutch carrier assembly.



Universal clutch holder P/N. YM-91042, 90890-04086

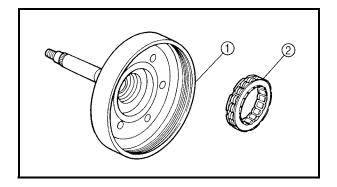

CHECKING THE CLUTCH

- 1. Check:
- clutch housing ①
 Heat damage/wear/damage → Replace.
- one-way clutch bearing ②
 Chafing/wear/damage → Replace.

NOTE: _

- Replace the one-way clutch assembly and clutch housing as a set.
- The one-way clutch bearing must be installed with the flange side facing in.

a. Install the one-way clutch bearing and clutch carrier assembly to the clutch housing and hold the clutch carrier assembly.