

PREFACE

This manual covers the construction, function and servicing procedures of the Honda BF2D outboard motor.

Careful observance of these instructions will result in better, safe service work.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATION OFFICE

CONTENTS

SPECIFICATIONS	1
SERVICE INFORMATION	2
MAINTENANCE	3
ENGINE COVER/FUEL TANK	4
RECOIL STARTER/FAN COVER	5
ENGINE REMOVAL/INSTALLATION	6
CARBURETOR	7
FLYWHEEL/IGNITION COIL	8
CLUTCH	9
CAMSHAFT/ROCKER ARM	10
OIL CASE/CRANKSHAFT/ CYLINDER BLOCK/PISTON/VALVE	11
STEERING HANDLE	12
CLUTCH HOUSING/ENGINE UNDER CASE/EXHAUST PIPE	13
STERN BRACKET/EXTENSION CASE	14
GEAR CASE/VERTICAL SHAFT	15