

## HOW TO USE THIS MANUAL

### MANUAL FORMAT

All of the procedures in this manual are organized in a sequential, step-by-step format. The information has been compiled to provide the mechanic with an easy to read, handy reference that contains comprehensive explanations of all disassembly, repair, assembly, and inspection operations.

In this revised format, the condition of a faulty component will precede an arrow symbol and the course of action required will follow the symbol, e.g.,

- Bearings  
Pitting/Damage → Replace.

To assist you in finding your way through this manual, the Section title and Major Heading is given at the top of every page.

On the first page of each Section is an Index of that section's contents.

### MODEL INDICATION

Multiple models are shown in this manual. These indications are noted as follows.

Model name	115CETO	115DETO	130BETO	L130BETO	140CETO	L140CETO
USA and CANADA name	(S)115TR	P115TR	(S)130TR	L130TR		
Indication	(S)115CETO	115DETO	(S)130BETO	L130BETO	140CETO	L140CETO

### THE ILLUSTRATIONS

Some illustrations in this manual may differ from the model you have. This is because a procedure described may relate to several models, though only one may be illustrated. (The name of the model described will be mentioned in the description).

### REFERENCES

The references have been kept to a minimum; however, when you are referred to another section of the manual, the page number of that section is given.