

SECTION 1 — GENERAL INFORMATION

TABLE OF CONTENTS

| | |
|---|------|
| Snowmobile Identification | 1-2 |
| Recommended Gasoline and Oil | 1-2 |
| Break-In Procedure | 1-2 |
| Genuine Parts | 1-2 |
| High Altitude Operation | 1-3 |
| Preparation For Storage | 1-3 |
| Preparation After Storage | 1-4 |
| After Break-In Checkup (100 Miles) | 1-5 |
| After Break-In Checkup Checklist | 1-6 |
| Check Engine Light (Crossfire/F-Series/M-Series Models) | 1-6 |
| Diagnostic Codes/Check Engine (Crossfire/F-Series/M-Series Models) | 1-6 |
| Chassis Control Unit (Crossfire/F-Series/M-Series Models) | 1-7 |
| Diagnostic Codes/Chassis Control Unit (Crossfire/F-Series/M-Series Models) | 1-7 |
| Torque Conversions | 1-8 |
| Tightening Torque (General Bolts) | 1-8 |
| Fraction/Decimal Conversion Chart | 1-9 |
| Drill Bit Sizes (Number) Chart | 1-9 |
| MM/In. Conversion Chart | 1-10 |
| Servicing Symbols | 1-11 |