

HOW TO USE THIS MANUAL

Section 1 through 3 apply to the whole motorcycle, while sections 4 through 16 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration and all the required specifications, torque values, general instructions, tools and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know what the source of the trouble is, go to section 17.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing. Honda Motor CO., LTD. reserves the right to make changes at any time without notice and without incurring any obligation whatever. No part of this publication may be reproduced without written permission.

HONDA MOTOR CO., LTD.
Service Publications Office

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	MAINTENANCE	3
ENGINE	FUEL SYSTEM	4
	ENGINE REMOVAL/INSTALLATION	5
	CYLINDER HEAD/VALVES	6
	CYLINDER/PISTON	7
	CLUTCH/OIL PUMP/ GEARSHIFT LINKAGE	8
	ALTERNATOR	9
	TRANSMISSION/CRANKSHAFT/ KICK STARTER	10
	CHASSIS	FRONT WHEEL/SUSPENSION/ STEERING
REAR WHEEL/DRIVE MECHANISM		12
REAR SUSPENSION		13
BRAKE MECHANISM		14
REAR FENDER/EXHAUST PIPE		15
	ELECTRICAL SYSTEM	16
	TROUBLESHOOTING	17