



HOW TO USE THIS MANUAL

Sections 1 through 3 apply to the whole motorcycle, while sections 4 through 19 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration and all the required specifications, torque values, general instructions, tools and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know the source of the trouble, see Section 20, TROUBLESHOOTING.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing. Honda Motor Co., Ltd. reserves the right to make change at any time without notice and without incurring any obligation whatever. No part of this publication may be reproduced without written permission.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATIONS OFFICE

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	MAINTENANCE	3
ENGINE	FUEL SYSTEM	4
	ENGINE REMOVAL/INSTALLATION	5
	CYLINDER HEAD/VALVES	6
	CYLINDER/PISTON	7
	CLUTCH/OIL PUMP/GEARSHIFT LINKAGE	8
	RECOIL STARTER/ALTERNATOR/STARTER CLUTCH	9
	SUB-TRANSMISSION/OUTPUT GEAR	10
	TRANSMISSION/CRANKSHAFT	11
CHASSIS	FRONT WHEEL/SUSPENSION/STEERING	12
	BRAKES	13
	REAR WHEEL/SUSPENSION/FINAL DRIVE	14
	CARRIERS/FENDER/EXHAUST MUFFLER	15
ELECTRICAL	IGNITION SYSTEM	16
	BATTERY/CHARGING SYSTEM	17
	STARTER SYSTEM	18
	LIGHTS/SWITCHES	19
	TROUBLESHOOTING	20