

GROUP 00

GENERAL <BODY AND CHASSIS>

CONTENTS

HOW TO USE THIS MANUAL	00-2	4. EVAPORATIVE EMISSION CONTROL SYSTEM (EXCEPT EVAPORATIVE EMISSION CANISTER) (CHECK FOR CLOGGING).	00-36
TROUBLESHOOTING GUIDELINES	00-6	5. SPARK PLUGS (REPLACE)	00-36
HOW TO USE TROUBLESHOOTING/INSPECTION SERVICE POINTS	00-6	6. IGNITION CABLES (REPLACE)	00-37
VEHICLE IDENTIFICATION	00-16	7. TIMING BELT (REPLACE)	00-37
VEHICLE IDENTIFICATION	00-16	8. DRIVE BELT (FOR GENERATOR, WATER PUMP AND POWER STEERING OIL PUMP) (CHECK CONDITION)	00-37
VEHICLE INFORMATION CODE PLATE	00-17	9. EXHAUST SYSTEM (CONNECTIONS, PIPES AND CONVERTER HEAT SHIELDS) (CHECK AND SERVICE AS REQUIRED)	00-40
PRECAUTIONS BEFORE SERVICE	00-21	10. ENGINE OIL (CHANGE)	00-40
TOWING AND HOISTING	00-24	11. ENGINE OIL FILTER (REPLACE)	00-41
GENERAL DATA AND SPECIFICATIONS	00-27	12. MANUAL TRANSAXLE OIL	00-42
TIGHTENING TORQUE	00-28	13. TRANSFER OIL	00-43
LUBRICATION AND MAINTENANCE	00-29	14. ENGINE COOLANT (CHANGE)	00-44
RECOMMENDED LUBRICANTS AND LUBRICANT CAPACITIES TABLE	00-30	15. COOLANT HOSES (RADIATOR HOSE, HEATER HOSE) (INSPECT)	00-45
SCHEDULED MAINTENANCE TABLE	00-32	16. DISC BRAKE PADS, ROTORS (INSPECT FOR WEAR)	00-46
MAINTENANCE SERVICE	00-35	17. BRAKE HOSES (CHECK FOR DETERIORATION OR LEAKS)	00-46
1. FUEL SYSTEM (TANK, PIPE LINE AND CONNECTION, AND FUEL TANK FILLER TUBE CAP) (CHECK FOR LEAKS)	00-35	18. BALL JOINT AND STEERING LINKAGE SEALS (INSPECT FOR GREASE LEAKS AND DAMAGE)	00-47
2. FUEL HOSES (CHECK CONDITION)	00-35	19. SUSPENSION SYSTEM (INSPECT FOR LOOSENESS AND DAMAGE)	00-47
3. AIR CLEANER ELEMENT (REPLACE)	00-36	20. DRIVE SHAFT BOOTS (INSPECT FOR GREASE LEAKS AND DAMAGE)	00-47
		21. REAR AXLE OIL (CHANGE)	00-47
		22. SRS AIR BAG (INSPECT THE SRS SYSTEM)	00-48
		23. TIRES (ROTATE)	00-53
		MAIN SEALANT AND ADHESIVE TABLE	00-53