

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Symptom	Condition	Diagnostic Item	Reference Page	
Almost no shock or clutches slipping in change from D ₁ to D ₂ .	ON vehicle	1. Fluid level and fluid condition	AT-59	GI
		2. Throttle position sensor (Adjustment)	EC-178	
		3. Line pressure	AT-62	MA
		4. Accumulator 1-2	AT-258	
		5. Control valve assembly	AT-258	EM
	OFF vehicle	6. Brake band	AT-315	
Almost no shock or slipping in change from D ₂ to D ₃ .	ON vehicle	1. Fluid level and fluid condition	AT-59	LC
		2. Throttle position sensor (Adjustment)	EC-178	
		3. Line pressure	AT-62	EC
		4. Accumulator 2-3	AT-258	
		5. Control valve assembly	AT-258	FE
	OFF vehicle	6. High clutch	AT-300	CL
		7. Brake band	AT-315	
Almost no shock or slipping in change from D ₃ to D ₄ .	ON vehicle	1. Fluid level and fluid condition	AT-59	MT
		2. Throttle position sensor (Adjustment)	EC-178	
		3. Line pressure	AT-62	AT
		4. Accumulator 3-4 (N-R)	AT-258	
		5. Control valve assembly	AT-258	TF
	OFF vehicle	6. High clutch	AT-300	
		7. Brake band	AT-315	PD
Vehicle braked by gear change from D ₁ to D ₂ .	ON vehicle	1. Fluid level and fluid condition	AT-59	
	OFF vehicle	2. Reverse clutch	AT-296	AX
		3. Low & reverse brake	AT-306	
		4. High clutch	AT-300	SU
		5. Low one-way clutch	AT-310	
Vehicle braked by gear change from D ₂ to D ₃ .	ON vehicle	1. Fluid level and fluid condition	AT-59	BR
	OFF vehicle	2. Brake band	AT-315	
Vehicle braked by gear change from D ₃ to D ₄ .	ON vehicle	1. Fluid level and fluid condition	AT-59	ST
	OFF vehicle	2. Overrun clutch	AT-302	
		3. Forward one-way clutch	AT-302	RS
		4. Reverse clutch	AT-296	

