

FRONT & REAR AXLE

SECTION AX

GI

MA

EM

LC

EC

FE

CONTENTS

FRONT AXLE	2	DISASSEMBLY.....	16	CL
Precautions	2	INSPECTION.....	17	
PRECAUTIONS	2	ASSEMBLY	17	MT
Preparation	2	INSTALLATION.....	19	
SPECIAL SERVICE TOOLS	2	Service Data and Specifications (SDS).....	20	
COMMERCIAL SERVICE TOOLS.....	2	WHEEL BEARING (FRONT)	20	AT
Noise, Vibration and Harshness (NVH)		DRIVE SHAFT (4WD MODELS).....	20	
Troubleshooting	3	REAR AXLE	22	
NVH TROUBLESHOOTING CHART	3	Precautions	22	TF
On-vehicle Service.....	3	PRECAUTIONS	22	
FRONT AXLE PARTS	3	Preparation	22	
FRONT WHEEL BEARING	4	SPECIAL SERVICE TOOLS	22	PD
DRIVE SHAFT	6	COMMERCIAL SERVICE TOOLS.....	23	
Components.....	7	Noise, Vibration and Harshness (NVH)		
Auto-lock Free-running Hub	9	Troubleshooting	24	AX
DESCRIPTION	9	On-vehicle Service.....	24	
REMOVAL AND INSTALLATION.....	9	REAR AXLE PARTS.....	24	SU
INSPECTION.....	10	REAR WHEEL BEARING	24	
TROUBLE DIAGNOSIS FOR NOISE	10	Components.....	25	
Wheel Hub and Rotor Disc.....	11	Removal.....	26	BR
REMOVAL AND INSTALLATION.....	11	Inspection.....	27	
DISASSEMBLY.....	12	AXLE SHAFT.....	27	
INSPECTION.....	12	WHEEL BEARING	27	ST
ASSEMBLY	12	AXLE CASE	27	
Knuckle Spindle	13	Installation.....	28	
REMOVAL.....	13	2WD MODELS.....	28	RS
INSPECTION.....	14	4WD MODELS.....	30	
INSTALLATION.....	14	Service Data and Specifications (SDS).....	31	
Drive Shaft	15	WHEEL BEARING (REAR)	31	BT
COMPONENTS	15			
REMOVAL.....	15			

HA

SC

EL

IDX