

- Remove radiator securing bolts from side of radiator and take radiator with fans out downward.

Installing

Install in reverse sequence ; note the following points:

- Check electrical connections and routing:

⇒ *Electrical Wiring Diagrams, Troubleshooting & Component Locations*

- Fill with coolant ⇒ [Page 19-15](#) .

Additional information and assembly work on models with air conditioning

CAUTION!

The air conditioning refrigerant circuit must not be opened.

Note:

To prevent damage to the condenser as well as to the refrigerant lines/hoses, ensure that lines and hoses are not stretched, kinked or bent.

- Remove retaining clamp(s) from refrigerant lines.