

---

**Escape (esc) key**

Press the Escape (esc) and Command (⌘) keys simultaneously to open Front Row.  
Press the Escape (esc) key to exit Front Row.

---

**Brightness keys (F1, F2)**

Increase (☀) or decrease (☾) the brightness of your Apple display.

---

**Exposé All Windows key (F3)**

Open Exposé for quick access to all your open windows.

---

**Dashboard key (F4)**

Open Dashboard to access your widgets.

---

**Mute key (F10)**

Mute the sound coming from the built-in speakers and headphone port.

---

**Volume keys (F11, F12)**

Decrease (🔊) or increase (🔊) the volume of sound coming from the speakers or headphone port on your Mac Pro.

---

**Media Eject key**

Press and hold the Media Eject (⏏) key to remove a disc.

---

**Function (fn) key**

Hold down to activate customized actions assigned to the function keys (F1 to F19).  
To learn about customizing function keys, choose Help > Mac Help from the menu bar and search for “function keys.”

---

**Media keys (F7, F8, F9)**

Fast-forward (⏩), play or pause (⏮), or rewind (⏪) a song, movie, or slideshow.

---

**Caps Lock key**

Press the Caps Lock key to engage caps lock so you can type capital letters.

---

**Two USB 2.0 ports**

Connect a mouse and sync your iPhone, iPod, or digital camera.

---