


<p>6 Check voltage between ground and ⑦.</p>	<p>Connect voltmeter at ⑦. Turn key to START position.</p>	<p>a. If no reading, solenoid is faulty. b. If solenoid clicks and meter reads battery voltage, go to Step 7.</p>
<p>7 Check voltage between ground and ⑧.</p>	<p>Reconnect starter to solenoid cable at ⑦. Connect meter at ⑧. Turn key to START position.</p>	<p>a. If meter reads battery voltage and starter motor does not turn, check starter motor. b. If no reading, check for broken cable or poor connection.</p>

PCE0054

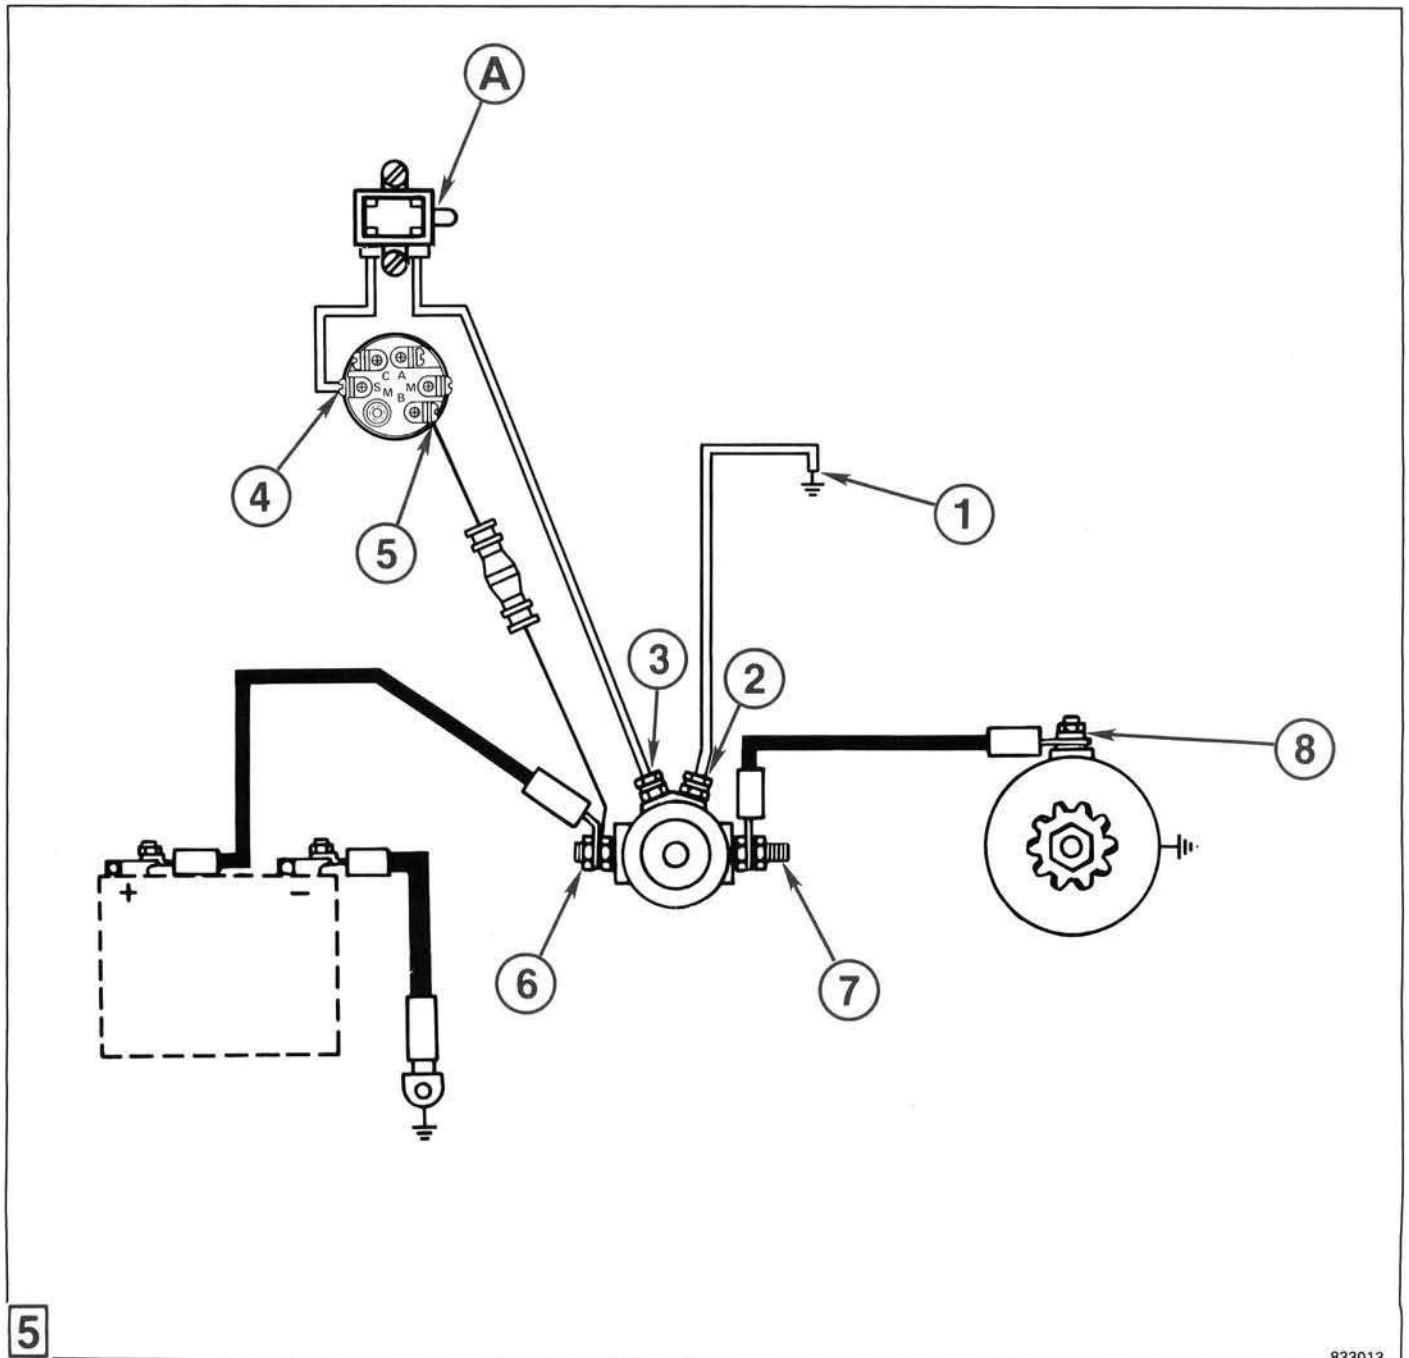

5

833013